



## Model Identification




### Model Identification Plate

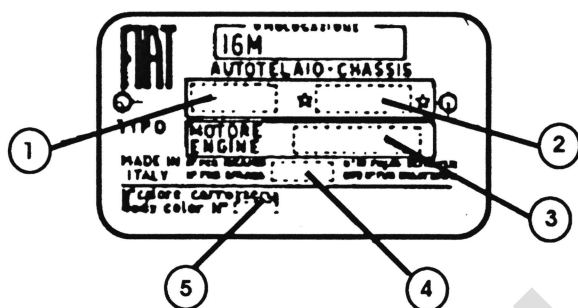

- 1 = Chassis Type
- 2 = Chassis Number
- 3 = Engine Type
- 4 = Spares Number (VETT. N.)
- 5 = Paint Number

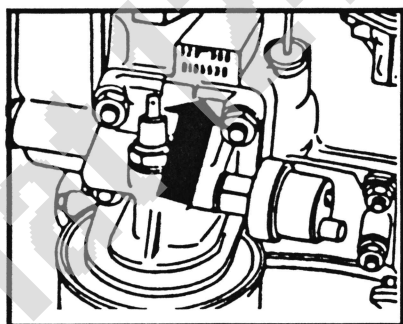

1968-78 Models

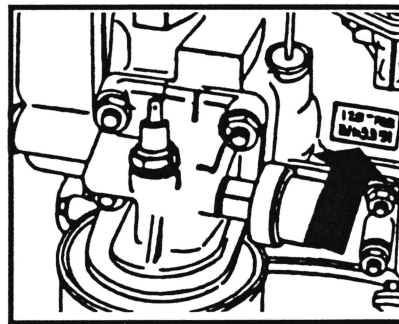


1979-85 Models

### Location of Engine Numbers (MOT.N.)


## Model Identification




### Model Identification Plate

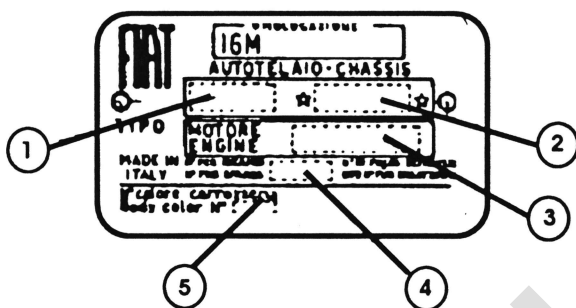

- 1 = Chassis Type
- 2 = Chassis Number
- 3 = Engine Type
- 4 = Spares Number (VETT. N.)
- 5 = Paint Number

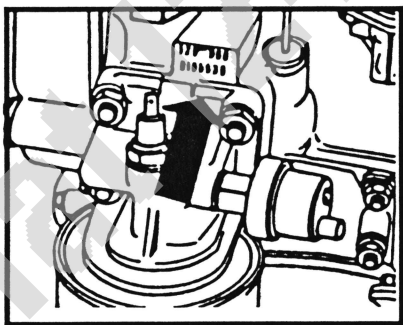

1968-78 Models

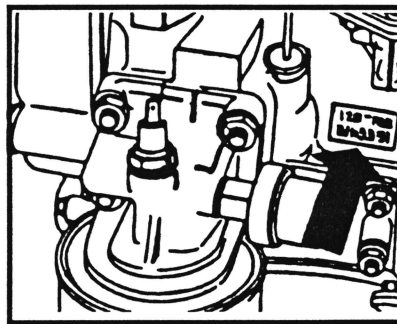


1979-85 Models

### Location of Engine Numbers (MOT.N.)

## Model Identification



### Model Identification Plate

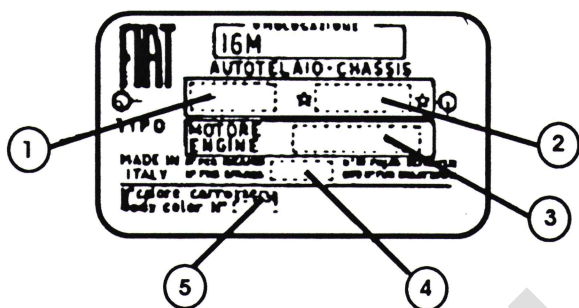


1 = Chassis Type

2 = Chassis Number


3 = Engine Type

4 = Spares Number (VETT. N.)

5 = Paint Number

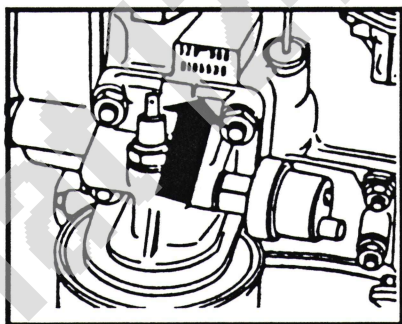

1968-78 Models

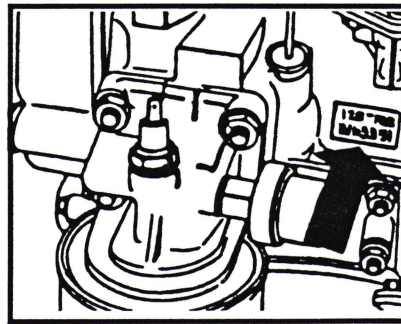

1979-85 Models

Location of Engine Numbers (MOT.N.)