FIG.10.24 WIRING DIAGRAM KEY FOR FIAT 124 SPORT SPIDER (AMERICAN)

- 1 Front direction indicators
- 2 Front parking lights
- 3 Headlamps (high and low beams)
- 4 Motorcompressor for electropneumatic horns
- 5 Horn control relay switch
- 6 Engine cooling fan motor
- 7 Ignition coil
- 8 Oil pressure gauge sending unit
- 9 Ignition distributor
- 10 Sprk plugs
- 11 Alternator
- 12 Engine fan motor thermostatic switch
- 13 Front side marker lamps
- 14 Heat gauge thermostatic switch: sends heat gauge pointer to scale end (excessive water temperature) independently of sending unit 18
- 15 Insufficient oil pressure indicator sending unit
- 16 Engine compartment lamps
- 17 Heat gauge additional resistor
- 18 Heat gauge sending unit
- 19 Battery
- 20 Voltage regulator
- 21 Press switch for electro-valve energizing during fast idle rate adjustments
- 22 Engine fan motor relay switch
- 23 Battery charge indicator relay
- 24 Starter motor
- 25 Engine compartment lamps jam switch
- 26 Electro-valve, exhaust emission control device
- 27 Fuses
- 28 Switch on clutch pedal for exhaust emission control electro-pneumatic device
- 29 Inspection lamp socket
- 30 Stop lights switch
- 31 Switch, on the hydraulic circuit, for indicator 57
- 32 Flasher, direction indicator
- 33 Windshield washer motor button switch
- 34 Electric pump windshield washer
- 35 Windshield wiper motor
- 36 Windshield wiper intermittent operation cycling switch unit
- 37 Flasher, indicator 57
- 38 Outer lighting 2-position switch
- 39 Fuel gauge
- 40 Fuel reserve indicator
- 41 Fuel gauge light
- 42 Speedometer light
- 43 Parking lights indicator (green)
- 44 Directional signal arrow tell-tale (green)
- 45 Headlamp high beam indicator (blue)
- 46 Insufficient oil pressure indicator (red)

- 47 Oil pressure gauge light
- 48 Oil pressure gauge
- 49 Battery charge indicator (red)
- 50 Engine tachometer
- 51 Engine tachometer light
- 52 Engine water heat gauge
- 53 Engine water heat gauge light
- 54 Clock
- 55 Clock light
- 56 Windshield wiper sweep rate rheostat
- 57 Brake system effectiveness and handbrake ON indicator (red)
- 58 Remove key indicator
- 59 Vehicular hazard warning signal indicator
- 60 Panel light rheostat switch
- 61 Jam switch, on left door pillar, for indicator 58
- 62 Separate 3 amp fuse for indicator 58 and its switch
- 63 Lock switch
- 64 Jam switches, between doors and pillars, for courtesy lights
- 65 Headlamp high/low beam change-over and low beam flashes switch
- 66 Direction indicators switch
- 67 Windshield wiper control three-position switch
- 68 Electropneumatic horn control button
- 69 Electro-fan 3-position switch
- 70 Electric cigarette lighter (with housing indicator)
- 71 Vehicular hazard warning signal switch
- 72 Courtesy light, with incorporated switch
- 73 Electro-fan motor, two-speed
- 74 Switch, on transmission (3rd and 4th gears) for exhaust emission control electro-pneumatic device
- 75 Fuel gauge sending unit
- 76 Luggage boot lamp jam switch
- 77 Back-up light switch
- 78 Switch, on handbrake lever, for indicator 57
- 79 Luggage boot lamp
- 80 Rear side marker lamps
- 81 Rear direction indicators
- 82 Rear parking lights
- 83 Rear stop lights 84 Back-up lights
- 85 Number plate lights

