



WIRING DIAGRAM

- 1 High/Low beam headlights
- 2 Front parking and turn signal lamps
- 3 Front side marker lamps
- 5 Alternator
- 6 Voltage regulator
- 9 Ignition distributor
- 10 Ignition coil
- 12 Starter motor
- 15 Horn relay
- 17 Engine water temperature gage sending unit
- 18 Oil pressure gage sending unit
- 18/1 Low oil pressure indicator sending unit
- 18/2 Thermostatic switch for engine water temperature gage
- 18/3 Brake system effectiveness indicator switch
- 18/4 Thermostatic switch for ignition mode selection relay control
- 23 Battery
- 25 Back-up lights switch
- 26 Stop light switch
- 28 Fuses
- 28/1 16-Amp fuse
- 28/2 3-Amp in-line fuse
- 28/3 8-Amp in-line fuse
- 28/4 8-Amp in-line fuse
- 30 Turn signal flasher
- 31 Windshield wiper intermittent cycling switch
- 32 Vehicular hazard warning signal flasher
- 33 Engine water temperature gage resistor
- 35 Two-speed windshield wiper motor
- 37 Two-speed heater fan motor
- 37/1 Engine fan motor
- 39 Relay for motor 37/1
- 40 Instrument cluster light rheostat-switch unit
- 41/1 Windshield wiper motor speed selection relay
- 42 Turn signal indicator switch
- 42/1 High/Low beams change-over switch
- 42/2 Wiper/washer three-position switch
- 44 Steering lock ignition switch
- 46 Lighting switch (controls also headlights)
- 49 Heater fan motor three-position switch
- 50 Vehicular hazard warning signal switch with incorporated light
- 51 Speedometer
- 53 Oil pressure gage
- 54 Engine water temperature gage
- 56 Tachometer
- 57 Fuel gage
- 59 Clock
- 61 Fuel reserve indicator (Red)
- 63 Low oil pressure indicator (Red)
- 64 Turn signal indicator (Flashes Green)
- 65/1 Vehicular hazard warning indicator (Flashes Red)
- 65/2 Brake system effectiveness indicator (Red)
- 65/3 Fasten belts indicator (Red)
- 66 Battery charge indicator (Red)
- 67 Parking and tail lights indicator (Green)
- 69 High beams indicator (Blue)
- 74 Cigar lighter with housing indicator
- 76 Hand brake ON switch
- 79 Horn button
- 81 Current receptacle
- 84 Washer pump motor
- 85 Courtesy light with switch
- 87 Courtesy light jamb switch
- 87/1 Remove key indicator jamb switch (driver's door)
- 93 Fuel gauge sending unit
- 95 Trunk light
- 96 Trunk light switch
- 98 Tail, turn signal, stop and back-up lights unit
- 98/1 Rear side markers lamps
- 99 License plate lamps
- 104 Thermostatic switch (on radiator) for motor 37/1
- 120 Fuel pump
- 126 Fasten belts and remove key buzzer
- 128 Battery charge relay
- 128/1 Relay for buzzer 126
- 128/2 Ignition mode selection relay
- 128/3 Fuel pump and ignition mode relay control switch
- 128/4 Starter relay
- 130 Horn compressor
- 161 Light source, optical fiber illumination
- 189 Interlock system electronic control unit
- 190 Exhaust gas recirculation control valve
- 191 Button switch on clutch for EGR valve control
- 192 Button switch on transmission for EGR valve control
- 193 Exhaust emission control device electrovalve
- 194 Button switch on driver's seat belt
- 194/1 Button switch on passenger's seat belt
- 194/2 Gear-engaged signal button switch
- 194/3 Strip switch in driver's seat cushion
- 194/4 Strip switch in passenger's seat cushion
- 195 Interlock by-pass switch