

1979 deckblatt.tif (1572x2154x2 tiff)
(c) FIAT 124 Spider Club e.V. (germany)



SPIDER 2000 - 1979


Wiring Diagrams

FIAT MOTORS OF NORTH AMERICA, INC.


Table of Contents

CIRCUITS	PAGE
Ignition, starter, alternator, engine cooling fan, idle shutoff solenoid, gulp valve electrovalve, and power distribution circuits	1
Starter circuit – automatic transmission	2
High and low beams circuits	3
Parking, license plate, side marker, and panel lights circuits	4
Hazard and turn signal, back-up, and stop lights circuits	5
Instruments, indicators, seat belt and remove key warning, courtesy light, clock, and socket circuits	6
Windshield washer/wiper, heater, horn, and cigarette lighter circuits	7
Power windows and radio circuits	8
Component Index	9/10


Ignition, Starter, Alternator, Engine Cooling Fan, Idle Shutoff Solenoid, Gulp Valve Electrovalve, and Power Distribution Circuits

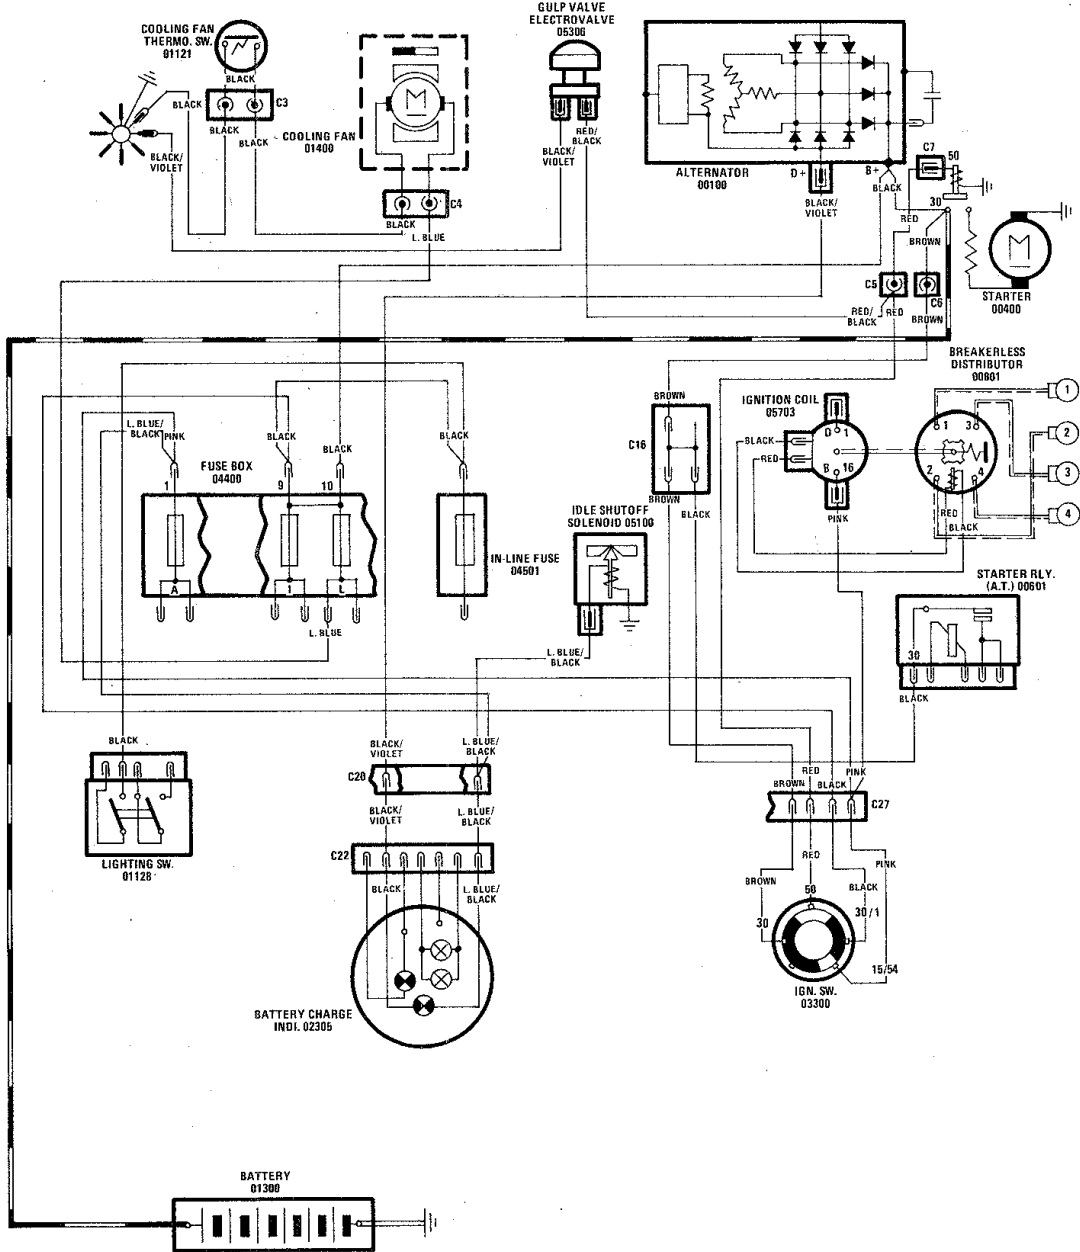


Starter Circuit – Automatic Transmission

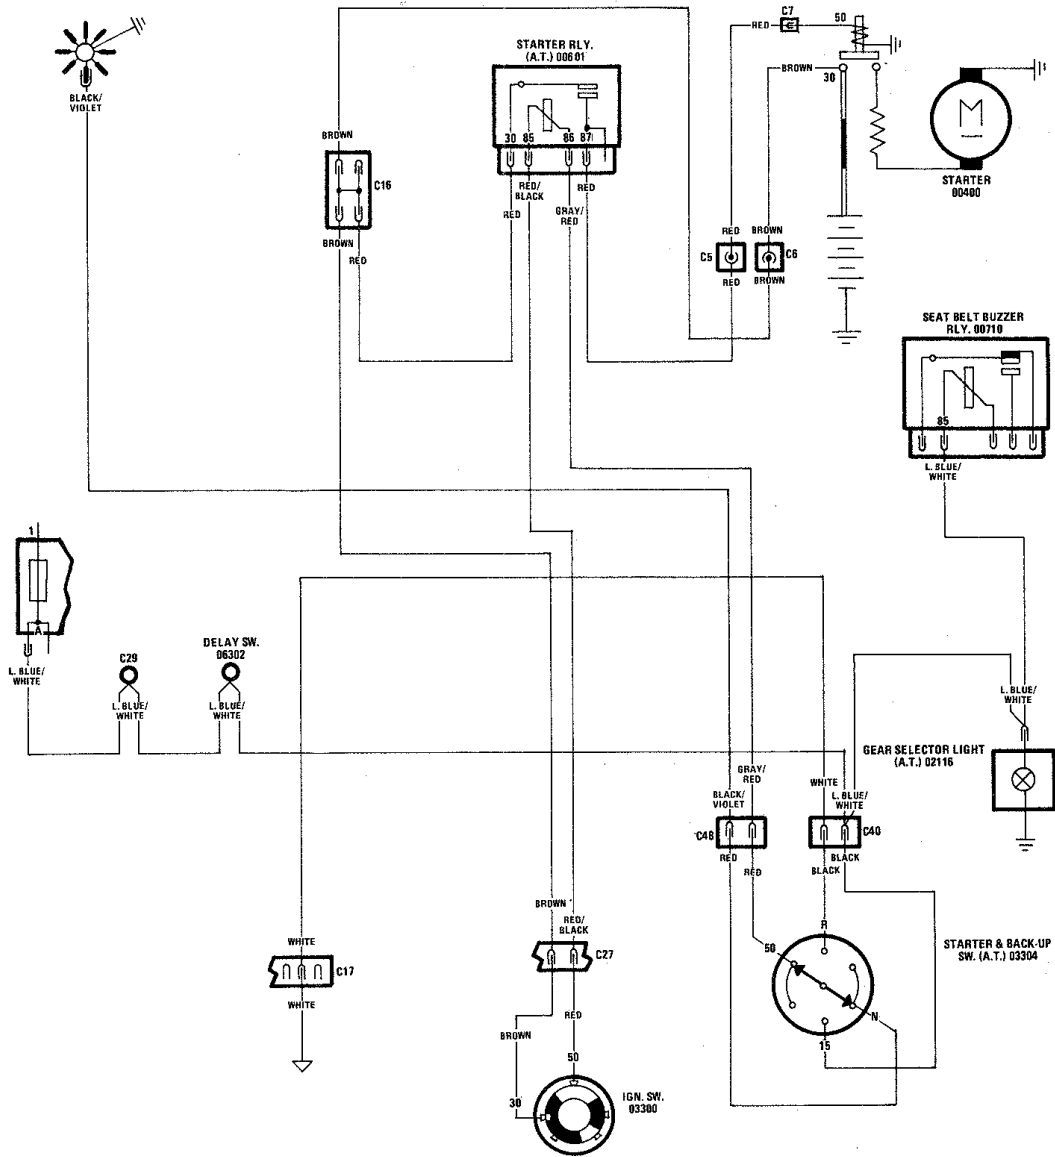


High and Low Beams Circuits

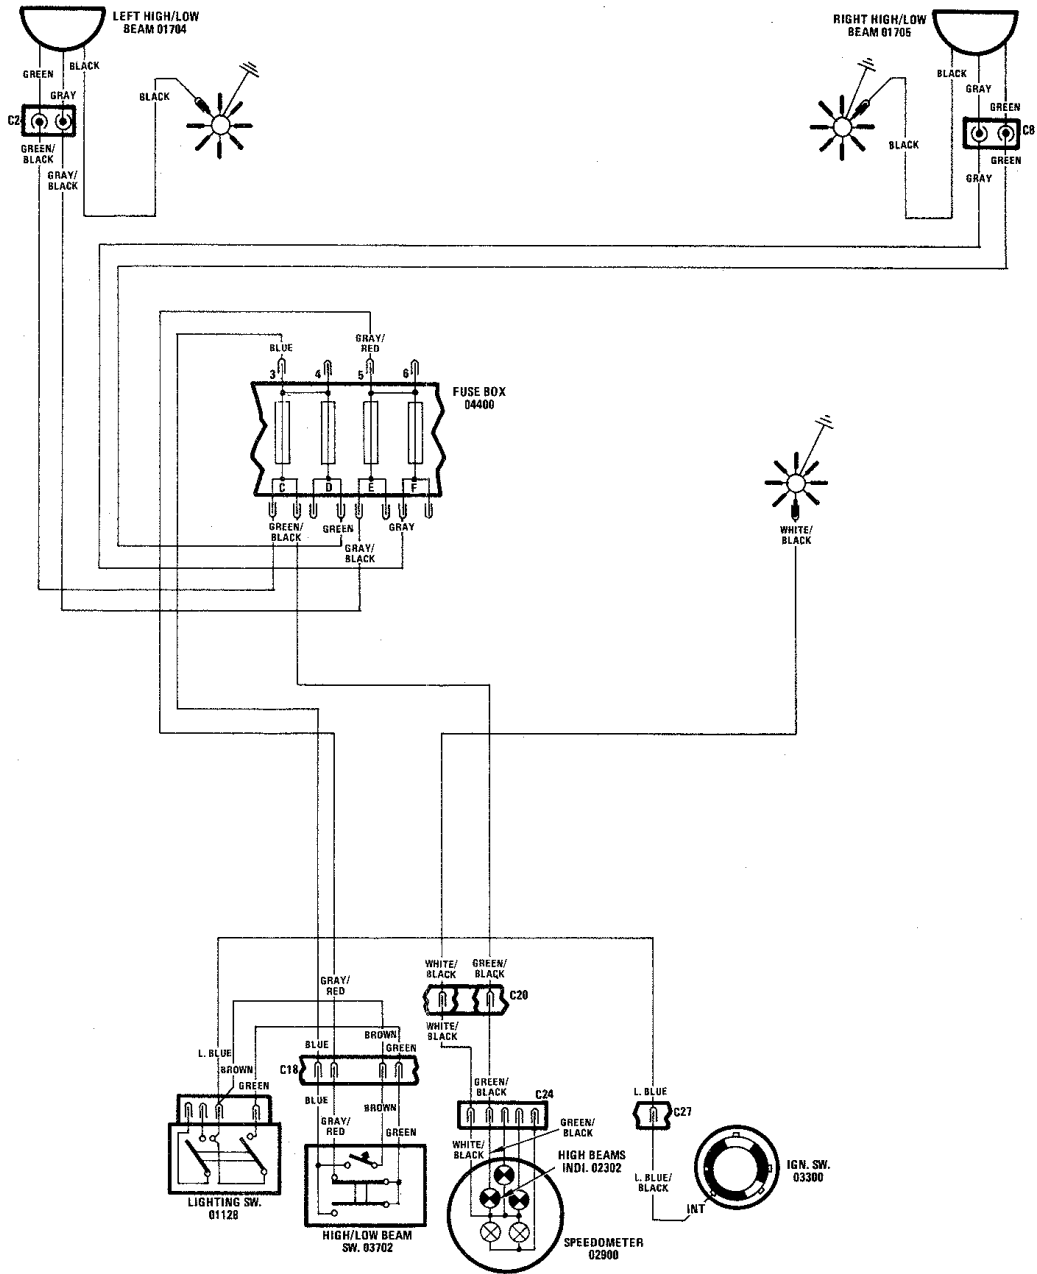


Parking, License Plate, Side Marker, and Panel Lights

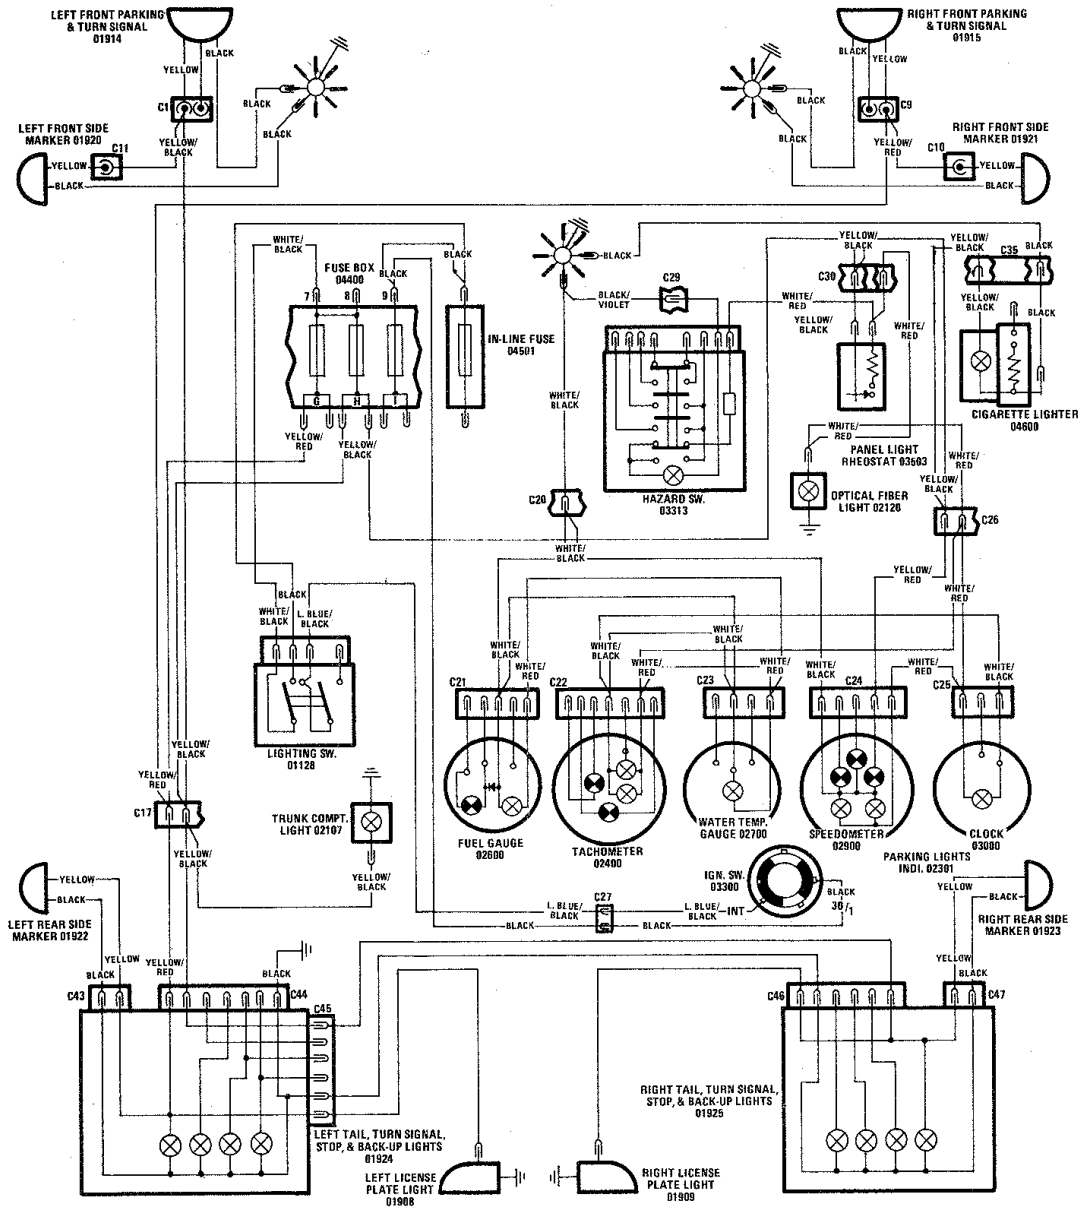


Hazard and Turn Signal, Back-Up, and Stop Lights Circuits

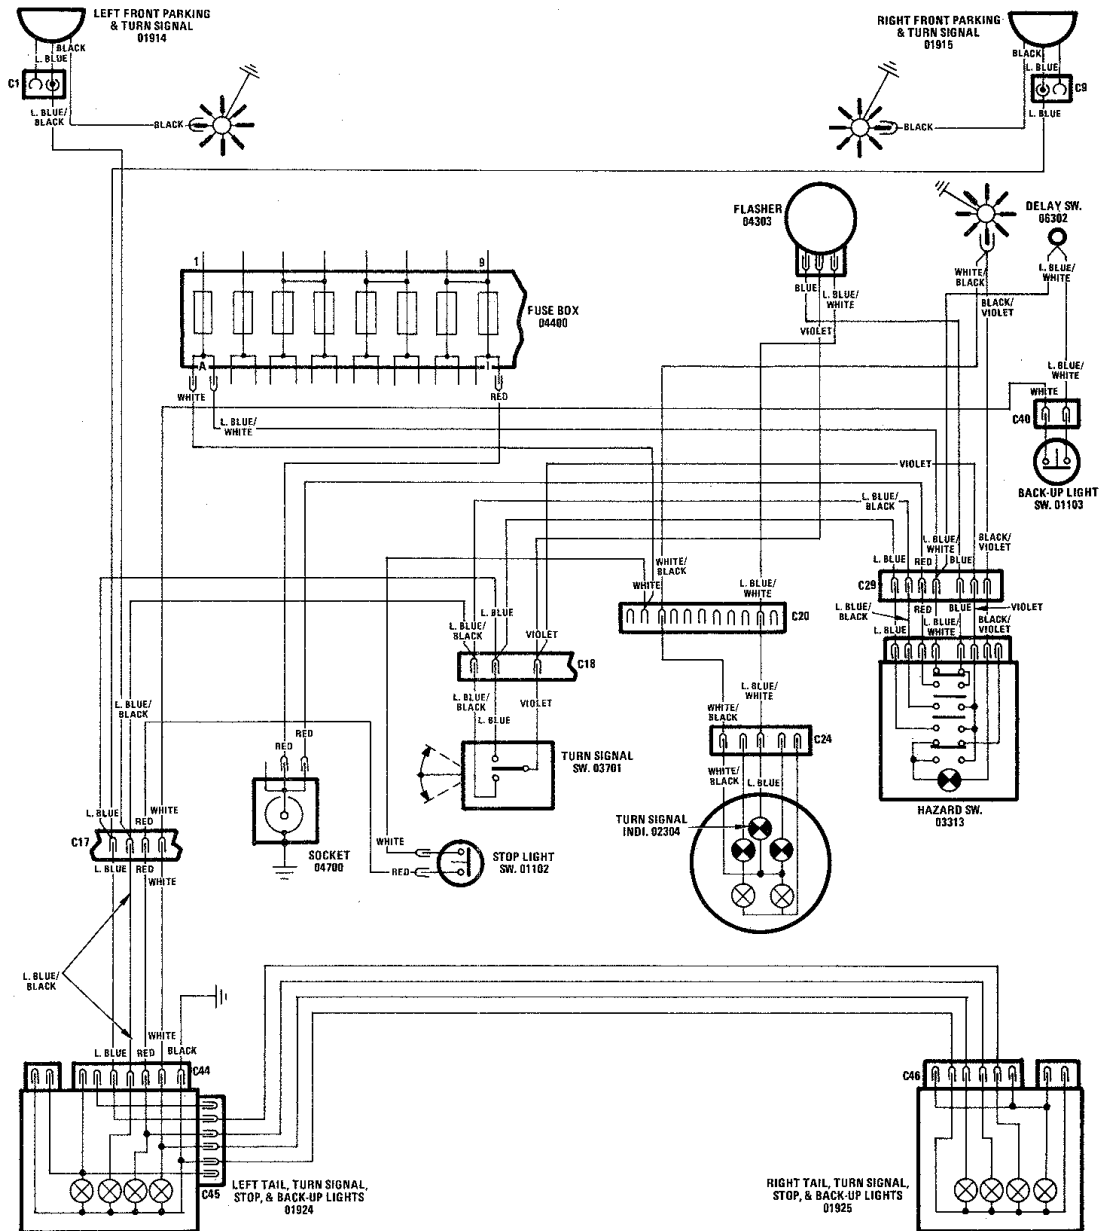


Instruments, Indicators, Seat Belt and Remove Key Warning, Courtesy Light, Clock, and Socket Circuits

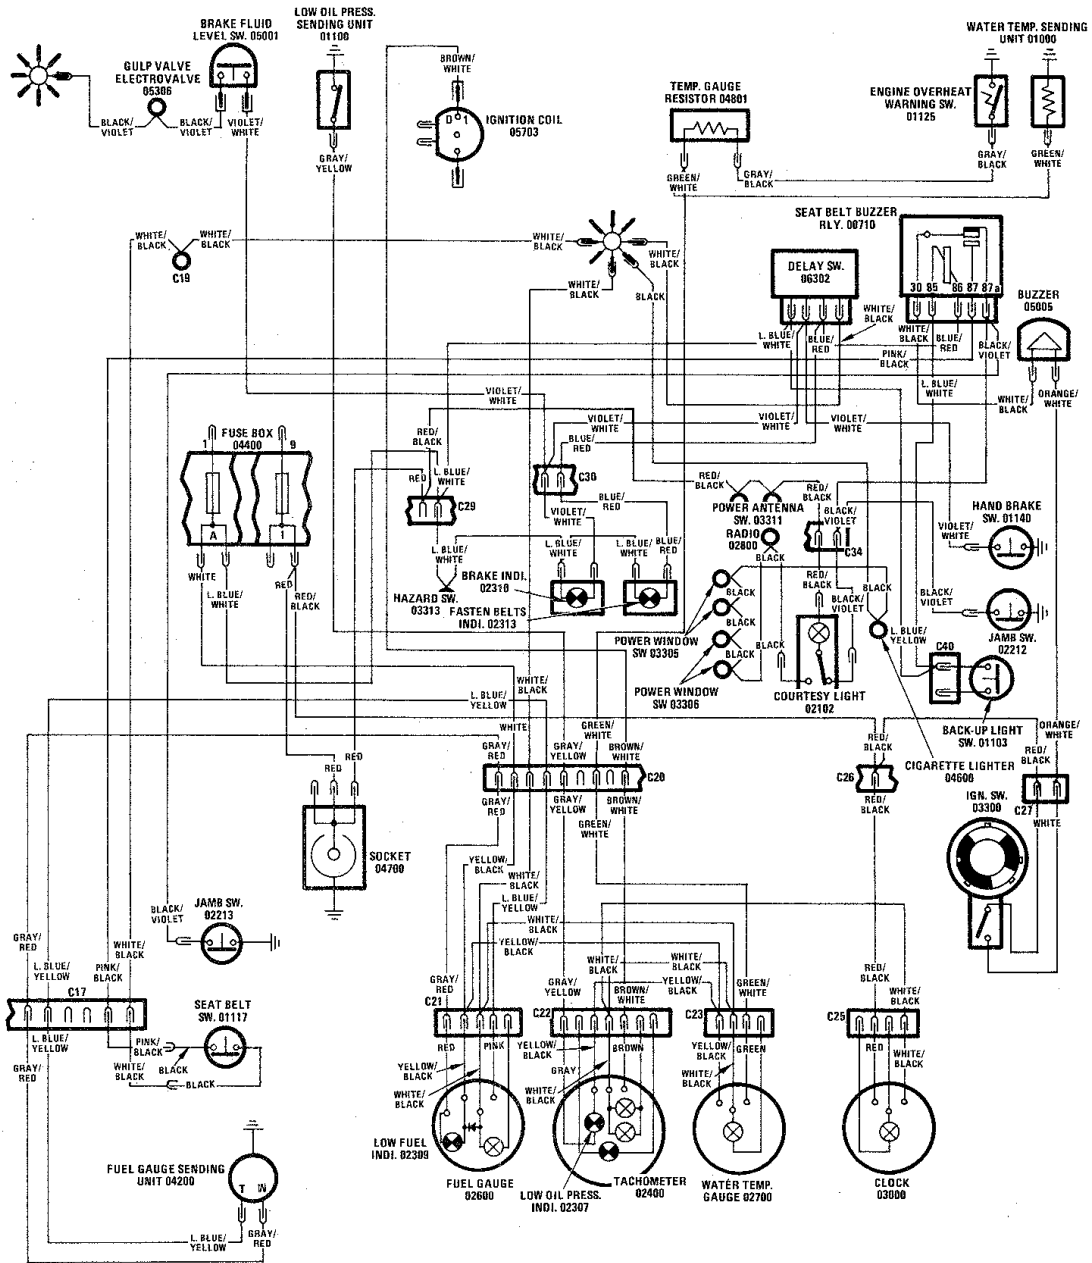

Windshield Washer/Wiper, Heater, Horn, and Cigarette Lighter Circuits

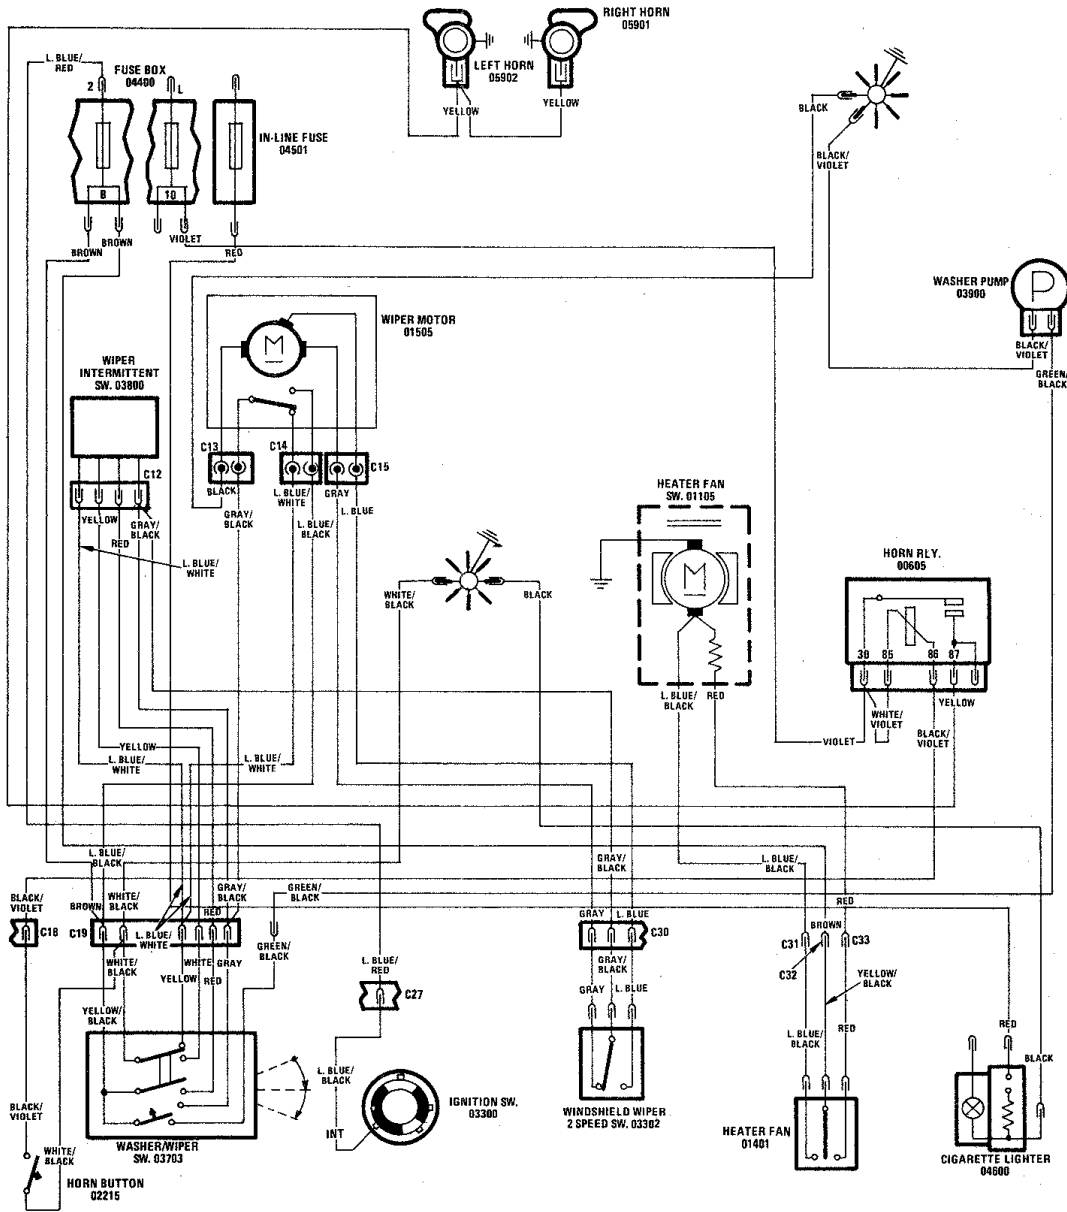

Power Windows and Radio Circuits

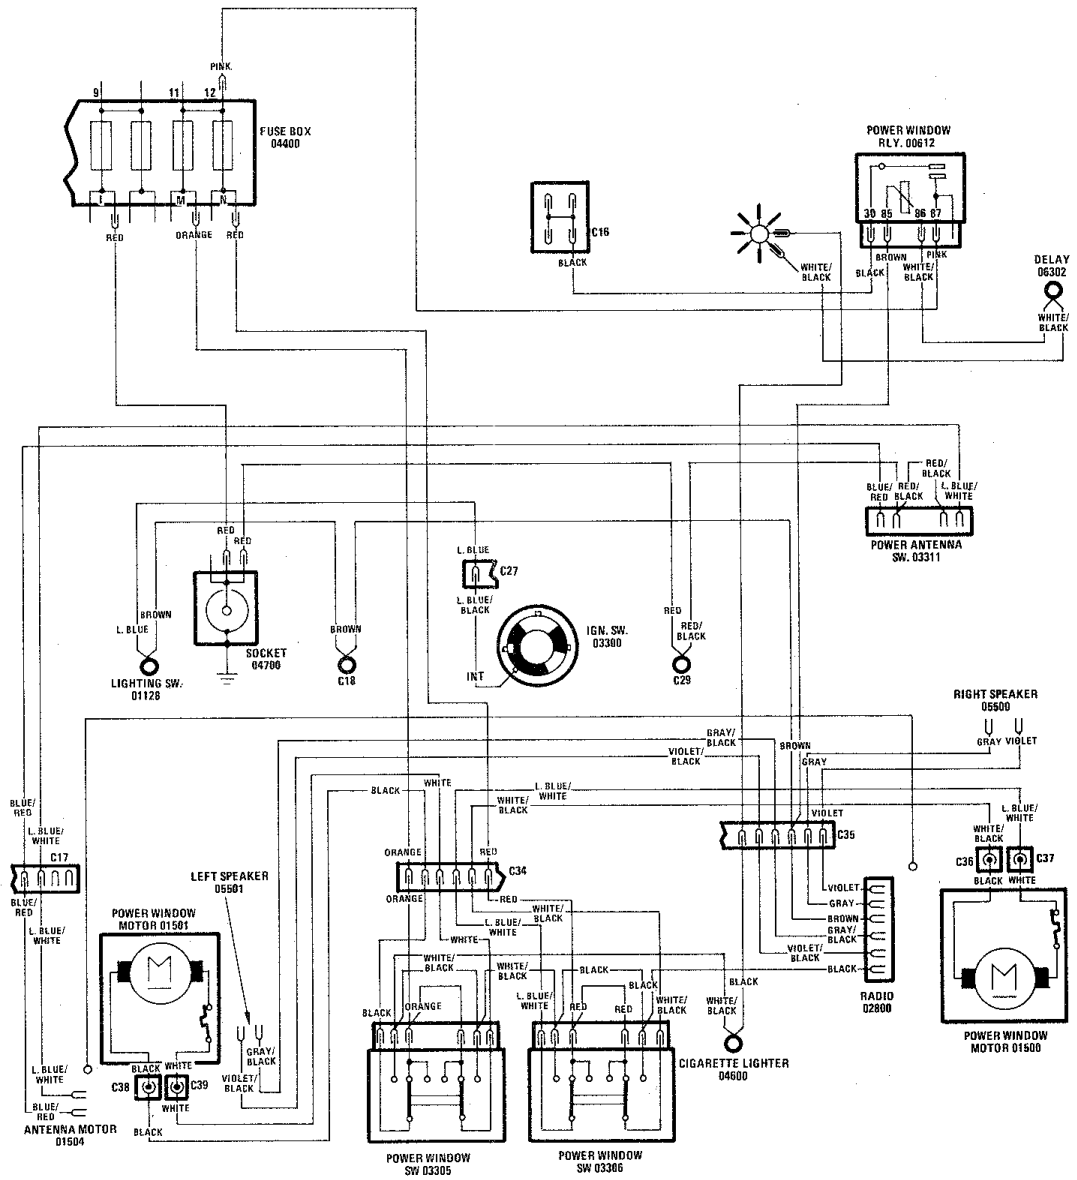

Component Index

00100	Alternator	02302	High beams indicators
00400	Starter	02304	Turn signal indicator
00601	Starter relay (automatic transmission)	02305	Battery charge indicator
00612	Power windows relay	02307	Low oil pressure indicator
00605	Horn relay	02309	Low fuel indicator
00710	Seat belt buzzer relay	02310	Brake system effectiveness indicator
00801	Brakerless ignition distributor	02313	Fasten seat belts indicator
01000	Engine water temperature gauge sending unit	02400	Tachometer
01100	Low oil pressure indicator sending switch	02600	Fuel gauge
01102	Stop light switch	02700	Engine water temperature gauge
01103	Back-up light switch	02800	Radio
01105	Heater fan switch	02900	Speedometer
01117	Switch on driver's seat belt	03000	Clock
01121	Cooling fan thermostatic switch	03300	Steering lock ignition switch
01125	Engine overheat warning switch	03302	Windshield wipers rheostat
01128	Lighting switch	03304	Starter and back-up light switch (automatic transmission)
01140	Hand brake "ON" switch	03305	Power window switch
01300	Battery	03306	Power window switch
01400	Cooling fan motor	03311	Power antenna switch
01401	Heater fan motor	03313	Hazard warning signal switch
01500	Power window motor	03503	Ideogram light rheostat
01501	Power window motor	03701	Turn signal indicator switch
01504	Antenna motor	03702	High/low beams changeover switch
01505	Windshield wiper motor	03703	Wiper/washer switch
01704	Left low beam	03800	Windshield wiper intermittent switch
01705	Right low beam	03900	Windshield washer pump
01908	Left license plate light	04200	Fuel gauge sending unit
01909	Right license plate light	04303	Turn signal and hazard flasher
01914	Left front parking and turn signal light	04400	Fuse box
01915	Right front parking and turn signal light	04501	In-line fuse for cigarette lighter
01920	Left front side marker light	04600	Cigarette lighter
01921	Right front side marker light	04700	Electrical sockets
01922	Left rear side marker light	04801	Water temperature gauge indicator resistor
01923	Right rear side marker light	05001	Brake fluid level switch
01924	Left tail, turn signal, stop and back-up light	05005	Fasten seat belts and remove key buzzer
01925	Right tail, turn signal, stop and back-up light	05100	Idle shutoff solenoid
02102	Passenger compartment light — with switch on dashboard	05306	Electrovalve for gulp valve
02107	Trunk compartment light	05500	Right radio speaker
02120	Optical fiber illumination light source	05501	Left radio speaker
02212	Courtesy light jamb switch — right door	05703	Ignition coil assembly
02213	Courtesy light jamb switch — left door	05901	Right horn
02215	Horn button	05902	Left horn
02301	Parking lights indicator	06302	Delay switch — seat belt indicator